



Service Circular

2006 Suggested Repair Times

Date: November 30, 2005
Number: VMS-05-14

3.6 Liter Engine:

| Miles (in thousands) | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
|--|---|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|
| Kilometers (in thousands) | 8 | 16 | 24 | 32 | 40 | 48 | 56 | 64 | 72 | 80 | 88 | 96 | 104 | 112 | 120 | 128 | 136 | 144 | 152 | 160 |
| Engine: Change engine oil and oil filter | • | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Engine: Check for leaks | | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Service interval display: Reset <i>(Where applicable)</i> | • | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Exhaust system: Check for damage & leaks | | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Battery: Check | | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Door check straps: Lubricate | | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Dust & pollen filter: Replace <i>(Where applicable)</i> | | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Cooling system: Check coolant level; add if necessary | | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Windshield washer fluid: Check level; add if necessary | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Automatic shift lock: Check operation including park/neutral position switch | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Automatic transmission: Check for leaks | | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Wiper blades: Check | | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Wheels: Rotate front to rear | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Tires/spare wheel: Check condition and pressure | | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Brake system: Check for damage/leaks, brake pad thickness, brake fluid level | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| V-belt/ribbed belt: Check condition; adjust if necessary | | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| 12V starter and auxiliary battery: Check <i>(Where applicable)</i> | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Drive shafts: Check boots | | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| On-Board Diagnostic system: Check fault memory; erase if necessary | | | | • | | • | | • | | • | | • | | • | | • | | • | | • |



Service Circular

2006 Suggested Repair Times

Date: November 30, 2005
Number: VMS-05-14

3.6 Liter Engine (cont'd):

| Miles (in thousands) | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
|--|---|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|
| Kilometers (in thousands) | 8 | 16 | 24 | 32 | 40 | 48 | 56 | 64 | 72 | 80 | 88 | 96 | 104 | 112 | 120 | 128 | 136 | 144 | 152 | 160 |
| Tire pressure monitoring system sensors: Check battery charge, replace wheel electronics and aluminum valve if necessary (<i>Where applicable</i>) | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Tires: Check tread depth and adjust pressures if necessary | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Spark plugs: Replace | | | | | | | | • | | | | | | | | • | | | | |
| Air cleaner: Replace filter and clean housing | | | | | | | | • | | | | | | | | • | | | | |
| Haldex clutch: Change oil (<i>Where applicable</i>) | | | | | | | | • | | | | | | | | • | | | | |
| Automatic transmission: Check ATF | | | | | | | | • | | | | | | | | • | | | | |
| Automatic transmission final drive oil: Check level and for leaks; add if necessary | | | | | | | | • | | | | | | | | • | | | | |
| Sunroof frame: Clean and Lubricate (<i>Where applicable</i>) | | | | • | | | | • | | | | • | | | | • | | | | • |
| Underbody: Check for damage | | | | | | | | • | | | | • | | | | • | | | | • |
| Headlights: Check & adjust if necessary | | | | • | | | | • | | | | • | | | | • | | | | • |
| Power steering: Check fluid level | | | | | | | | • | | | | • | | | | • | | | | • |
| Front axle: Check dust seals on ball joints and tie rod ends; check tie rods | | | | • | | | | • | | | | • | | | | • | | | | • |
| Road Test: Check kick down, braking, steering, heating and ventilation, air conditioning, power accessories and electrical systems | | | | • | | | | • | | | | • | | | | • | | | | • |
| Every 12 months, regardless of mileage (kilometers): Perform visual check on Airbag system. | | | | | | | | | | | | | | | | | | | | |
| Every 2 years, regardless of mileage (kilometers): Change brake fluid. | | | | | | | | | | | | | | | | | | | | |
| Every 2 years (for vehicles driven less than 60,000 km / 40,000 miles in 2 years): Dust and pollen filter is replaced. | | | | | | | | | | | | | | | | | | | | |
| Every 4 years, regardless of mileage (kilometers): Tire filler bottle in the tire mobility set is replaced (Observe expiration date). | | | | | | | | | | | | | | | | | | | | |
| Every 4 years (for vehicles driven less than 60,000 km / 40,000 miles in 4 years) (except 2.0 TFSI 200 hp) : Spark plugs are changed. | | | | | | | | | | | | | | | | | | | | |
| Every 6 years, regardless of mileage (kilometers): Tire pressure sensors are changed | | | | | | | | | | | | | | | | | | | | |
| Every 6 years (for vehicles driven less than 90,000 km/ 60,000 miles in 6 years): Air filter element is replaced and the housing cleaned. | | | | | | | | | | | | | | | | | | | | |



Service Circular

2006 Scheduled Maintenance Intervals (by Engine)

Date: November 30, 2005

Number: VMS-05-14

2.0 Liter TFSI Engine:

| Miles (in thousands) | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 |
|--|---|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|
| Kilometers (in thousands) | 8 | 16 | 24 | 32 | 40 | 48 | 56 | 64 | 72 | 80 | 88 | 96 | 104 | 112 | 120 | 128 | 136 | 144 | 152 | 160 |
| Engine: Change engine oil and oil filter | • | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Engine: Check for leaks | | | | • | | | | • | | | | • | | | | • | | | | • |
| Service interval display: Reset <i>(Where applicable)</i> | • | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Exhaust system: Check for damage & leaks | | | | • | | | | • | | | | • | | | | • | | | | • |
| Battery: Check | | | | • | | | | • | | | | • | | | | • | | | | • |
| Door check straps: Lubricate | | | | • | | | | • | | | | • | | | | • | | | | • |
| Dust & pollen filter: Replace <i>(Where applicable)</i> | | | | • | | | | • | | | | • | | | | • | | | | • |
| Cooling system: Check coolant level; add if necessary | | | | • | | | | • | | | | • | | | | • | | | | • |
| Windshield washer fluid: Check level; add if necessary | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Automatic shift lock: Check operation including park/neutral position switch | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Automatic transmission: Check for leaks | | | | • | | | | • | | | | • | | | | • | | | | • |
| Wiper blades: Check | | | | | | | | • | | | | • | | | | • | | | | • |
| Wheels: Rotate front to rear | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Tires/spare wheel: Check condition and pressure | | | | • | | | | • | | | | • | | | | • | | | | • |
| Brake system: Check for damage/leaks, brake pad thickness, brake fluid level | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| 12V starter and auxiliary battery: Check <i>(Where applicable)</i> | | | | • | | • | | • | | • | | • | | • | | • | | • | | • |
| Timing belt: Check | | | | | | | | | | | | • | | | | • | | | | • |
| Sunroof frame: Clean and lubricate | | | | • | | | | • | | | | • | | | | • | | | | • |
| On-Board Diagnostic system: Check fault memory; erase if necessary | | | | • | | | | • | | | | • | | | | • | | | | • |
| Drive shafts: Check boots | | | | • | | | | • | | | | • | | | | • | | | | • |



Service Circular

2006 Scheduled Maintenance Intervals (by Engine)

Date: November 30, 2005

Number: VMS-05-14

2.0 Liter TFSI Engine (cont'd):

| Miles (in thousands) | 5 | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65 | 70 | 75 | 80 | 85 | 90 | 95 | 100 | |
|--|---|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|--|
| Kilometers (in thousands) | 8 | 16 | 24 | 32 | 40 | 48 | 56 | 64 | 72 | 80 | 88 | 96 | 104 | 112 | 120 | 128 | 136 | 144 | 152 | 160 | |
| V-belt/ribbed belt: Check tension and condition; adjust if necessary | | | | | | | | • | | | | | | | | • | | | | | |
| Tire pressure monitoring system sensors: Check battery charge, replace wheel electronics and aluminum valve if necessary (<i>Where applicable</i>) | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | |
| Tires: Check tread depth and adjust pressures if necessary | | • | | • | | • | | • | | • | | • | | • | | • | | • | | • | |
| Spark plugs: Replace | | | | | | | | | | | | • | | | | | | | | | |
| Haldex clutch: Change oil (<i>Where applicable</i>) | | | | | | | | • | | | | | | | | • | | | | | |
| Air cleaner: Replace filter and clean housing | | | | | | | | • | | | | | | | | • | | | | | |
| Automatic transmission: Check ATF | | | | | | | | • | | | | | | | | • | | | | | |
| Automatic transmission final drive oil: Check level and for leaks; add if necessary | | | | | | | | • | | | | | | | | • | | | | | |
| Manual transmission: Check oil level; add if necessary, check for leaks | | | | • | | | | • | | | | • | | | | • | | | | • | |
| Underbody: Check for damage | | | | | | | | • | | | | | | | | • | | | | | |
| Headlights: Check & adjust if necessary | | | | • | | | | • | | | | • | | | | • | | | | • | |
| Power steering: Check fluid level | | | | | | | | • | | | | | | | | • | | | | | |
| Front axle: Check dust seals on ball joints and tie rod ends; check tie rods | | | | • | | | | • | | | | • | | | | • | | | | • | |
| Road Test: Check kick down, braking, steering, heating and ventilation, air conditioning, power accessories and electrical systems | | | | • | | | | • | | | | • | | | | • | | | | • | |
| Every 12 months, regardless of mileage (kilometers): Perform visual check on Airbag system. | | | | | | | | | | | | | | | | | | | | | |
| Every 2 years, regardless of mileage (kilometers): Change brake fluid. | | | | | | | | | | | | | | | | | | | | | |
| Every 2 years (for vehicles driven less than 60,000 km / 40,000 miles in 2 years): Dust and pollen filter is replaced. | | | | | | | | | | | | | | | | | | | | | |
| Every 4 years, regardless of mileage (kilometers): Tire filler bottle in the tire mobility set is replaced (Observe expiration date). | | | | | | | | | | | | | | | | | | | | | |
| Every 6 years (for vehicles driven less than 90,000 km / 60,000 miles in 6 years (only 2.0 TFSI 200 hp)) : Spark plugs are changed. | | | | | | | | | | | | | | | | | | | | | |
| Every 6 years, regardless of mileage (kilometers): Tire pressure sensors are changed | | | | | | | | | | | | | | | | | | | | | |